SIERRA WIRELESS
HEART OF THE WIRELESS MACHINE®

>> Quick Start Guide
for the AirCard® 59x products

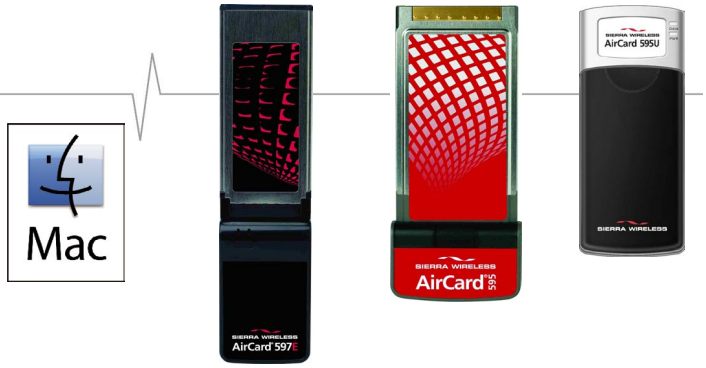

This document describes how to install and use the AirCard 595 PC Card, AirCard 595U USB modem, or AirCard 597E ExpressCard ("device") on a Mac® computer. For all technical support, please contact Apple.

What you'll need

For this device:	You'll need this type of computer:
AirCard 595 PC Card	PowerBook® G4
AirCard 595U USB modem	MacBook™, MacBook Pro, PowerBook G4, Power Mac® G5, or desktop iMac computer.
AirCard 597E ExpressCard	MacBook Pro or Power Mac G5 with a PCI–X slot

Your computer must be running Mac OS X version 10.4 or later. To check your version, from the Apple menu ( ) choose **About This Mac**. If your version is earlier, then visit www.apple.com/downloads/macosx/apple for upgrading instructions, or, in Finder™, choose **Go > Applications > System Preferences**. Double-click the System Preferences icon, then double-click **Software Update**. Click **Check Now**.

If your device has not been activated, you'll also need a telephone.

Installing Watcher™ Lite

1. Visit www.sierrawireless.com/mac/CDMA to download the Sierra Wireless Watcher Lite Installer program to your computer.

   The program will automatically mount the disk image and start the installation.

2. In Finder, choose **Go > Applications > Sierra Wireless Watcher**.

   Watcher Lite should start:

3. Hold the device by its sides and insert the device into your computer.

Warning! When inserting or removing your device, always grip it by its sides; this prevents damage to the device.

4. If the New Port Detected window appears, click **Continue**.

New Port Detected
The system is about to automatically configure:
Sierra Wireless AC595 Modem
You may need to enter the name and password for an administrator on this computer.
Cancel
Continue

5. If the Authenticate window appears, enter your Mac username and password, then click **OK**.

6. If Watcher Lite displays "Device is Locked", unlock the device:

   a) If the Unlock Device window is not displayed: from the **Extras** item on the Sierra Wireless Watcher menu, choose **Unlock Device**.

b) In the Unlock Device window, enter the lock code (PIN), and click **OK**.

If you can't recall your lock code, try using the last four digits of your device's wireless phone number or try 0000. If none of these work, call your service provider.

7. If the Activation Assistant window appears, your device is not activated. You can activate your device on your Mac, or on a Windows PC (for the latter option, see the next page):

   To activate your device on your Mac:

   a) Click **Continue**.

   b) Ensure you have the items listed on the screen, and phone your service provider. Inform them that you are activating a Sierra Wireless wireless device.

   c) Follow the instructions of your service provider to activate your device. Write down this information that your service provider gives you (depending on your service provider, some of the following items may not apply):

   Activation code (MSL): _____

   AirCard phone number (MDN): _____

   MIN / IMSI_S (if not the same value as your MDN [above]): _____

   MSID: _____

   After your service provider sets up your account on the network, your device is activated.

   d) To complete the activation process, enter the information (that you wrote down) into the fields on the screen.

8. If the Authenticate window appears, enter your Mac username and password, then click **OK**.

9. If the New Port Configuration window appears, click **Continue** to automatically configure your computer to use your device.

You can now connect to your service provider's network (see the following section).

Connecting to the network

To connect to the network:

1. In Watcher Lite, click **Connect**.

Once you're connected to the network, Watcher Lite shows the amount of time you've been connected, and the amount of data received (Rx) and transmitted (Tx).

To end your network connection:

1. In Watcher Lite, click **Disconnect**.

Icons and text in Watcher Lite

Icon/text	Description
	CDMA network signal strength, indicated by the number of bars.
	You are not in coverage.
	You are in 1X and 1xEV–DO Rev. 0 coverage.
	You are in 1X and 1xEV–DO Rev. A coverage.
	You are in 1X coverage.
	You are in 1xEV–DO Rev. 0 coverage.
	You are in 1xEV–DO Rev. A coverage.
	You are roaming. Roaming charges may apply.
	You are not roaming.
Disconnected	Ready to connect to the network. To connect, in Watcher Lite click **Connect**.
Connected	Connected to the network.
No device detected	Ensure the device is properly inserted into your computer.
Not activated	To use your device, you must activate it. From the **Extras** item on the Sierra Wireless Watcher menu, choose **Activation**.
Device is Locked	From the **Extras** item on the Sierra Wireless Watcher menu, choose **Unlock Device**.
Rx	Amount of data received from the network.
Tx	Amount of data transmitted to the network.

Menu options

From the **Extras** item on the Sierra Wireless Watcher menu, you can:

- Turn the device off (for example, when you're in an aircraft). Available only on the AirCard 595 PC Card.
- Activate your device
- Lock/unlock your device
- View information about the device
- View, configure, and use the data and VPN connections available on your computer (for example, WWAN)

Removing your device

To remove the device from your Mac:

1. End your network connection, as described on the previous page.
2. If your device is an AirCard 595 PC Card: from the **Extras** item on the Sierra Wireless Watcher menu, choose **Turn Device Off**.
3. If your device is a PC Card or ExpressCard, eject the device from the slot.
4. Remove the device.

Warning! When inserting or removing your device, always grip it by its sides; this prevents damage to the device.

Activating your device on a Windows PC

If the Activation Assistant window appears during the installation of Watcher Lite on your Mac, your device is not activated. You can activate your device on your Mac (described on the previous page [step 7]), or on a Windows PC.

If you prefer to activate your device on a Windows PC, you will need a telephone, and a Windows-based PC with the appropriate slot (PC Card, ExpressCard, or USB), running Windows Vista, Windows 2000 (with Service Pack 1 or later) or Windows XP.

To activate your device on a Windows PC:

1. Remove the device from your Mac.
2. Write down your device's ESN (the 11-digit number on the back of your device; on the USB modem, the number is under the battery).

   _____

3. Install the Watcher software on the Windows PC. (If you're using Windows 2000, you must log in with administrative privileges.)

   a) Insert the CD into the Windows PC.

   b) If the CD does not autostart, select **Start > Run > d:\launch.exe** (where **d** is your CD–ROM drive letter).

   c) Follow the instructions displayed on the screen. When you are notified that the installation is complete, insert the device.

   After Windows installs the drivers for the device, the Activation Wizard should start automatically.

4. Ensure you have the items listed on the screen, and phone your service provider. Inform them that you are activating a Sierra Wireless wireless device.
5. Follow the instructions of your service provider to activate your device. Write down this information that your service provider gives you (depending on your service provider, some of the following items may not apply):

   Activation code (MSL): _____

   AirCard phone number (MDN): _____

   MIN / IMSI_S (if not the same value as your MDN [above]): _____

   MSID: _____

   After your service provider sets up your account on the network, your device is activated.

6. To complete the activation process, enter the information (that you wrote down) into the fields on the screen.
7. After you've completed the Activation Wizard, close Watcher, and remove the device from your Windows computer.
8. Insert the device into your Mac computer.
9. Follow the instructions in section "Installing Watcher Lite", starting from step 2 (see page 1).

Care and maintenance

As with any electronic device, your device must be handled with care to ensure reliable operation.

Follow these guidelines in using and storing the device:

- Do not apply adhesive labels to the device.
- The device should fit easily into the PC Card, ExpressCard, or USB slot. Forcing the device into the slot may damage connector pins.
- To avoid the risk of explosion, use the same battery model when replacing the battery of the AirCard 595U USB modem. Properly dispose of the used battery.
- The USB connector of the AirCard 595U USB modem is adjustable to three positions—approximately 90, 135, and 160 degrees. Do not force the hinge past the last position—this may break the connector.
- Protect the device from liquids, dust, and excessive heat.
- When the device is not connected to your computer, store the device in a safe place (for example, in the plastic case provided with your PC Card).

©2007 Sierra Wireless. All rights reserved.
The Sierra Wireless logo, Heart of the Wireless Machine, and AirCard are registered trademarks of Sierra Wireless. Watcher is a trademark of Sierra Wireless.
The Mac logo, Mac OS, PowerBook, and Finder are trademarks of Apple Inc.
Other logos, company or product names that appear in this document may be trademarks of their respective owners. All product specifications are subject to change without notice.
2130789 Rev 1.2